

# **POINT 65°N** *Kayaks SWEDEN*



## **Rudder installation guide**

# POINT 65°N

Kayaks SWEDEN

## How to install the Point65 Rudder

The Point65 Rudder has been designed to fit all the Point65 models except the DoubleShot and Martini. The Nemo DT has no rudder sleeve installed and can not be outfitted with Rudder afterwards.

The Whisky 16 and 18 who have been sold as skeg only models will not have a rudder sleeve installed, but it can in most cases be installed with some difficulty.


In the USA and Canada a different rudder is used, with a separate intallation guide.



1. Install the rudder into the Rudder sleeve at the back of the kayak. Make sure the Rudder is turned as much toward the front as possible and turn it.



2. In this position you should not be able to lift the rudder out of the rudder sleeve. If you can, you should turn it back into position on image 1 and push down even further.

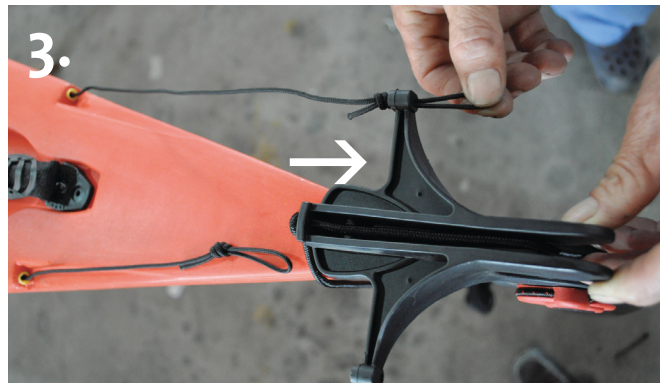

3. Pull the end of the Rudder line loop through the hole in the rudder "wing". After pulling it through, bend it back over the "wing" and place the end of the loop into the groove above the hole through which it was pulled at the start.



4. Pull the line tight so to fasten the loop in the groove. With this quick release knot, you can easily dismantle the rudder when transporting the kayak on land.



5. Tighten the rudderlines when sitting in the cockpit by adjusting the mini-line lockers. To tighten, pull the miniline locker towards the back. To loosen the lines do as on image above.